

BC 300 T Brushcutter

Documents

Engine

Starter assy and clutch

Tank and air filter

Transmission

Carburetor WT-1150

Accessories

Illustrated parts list (Head "Load and Go" Ø130)

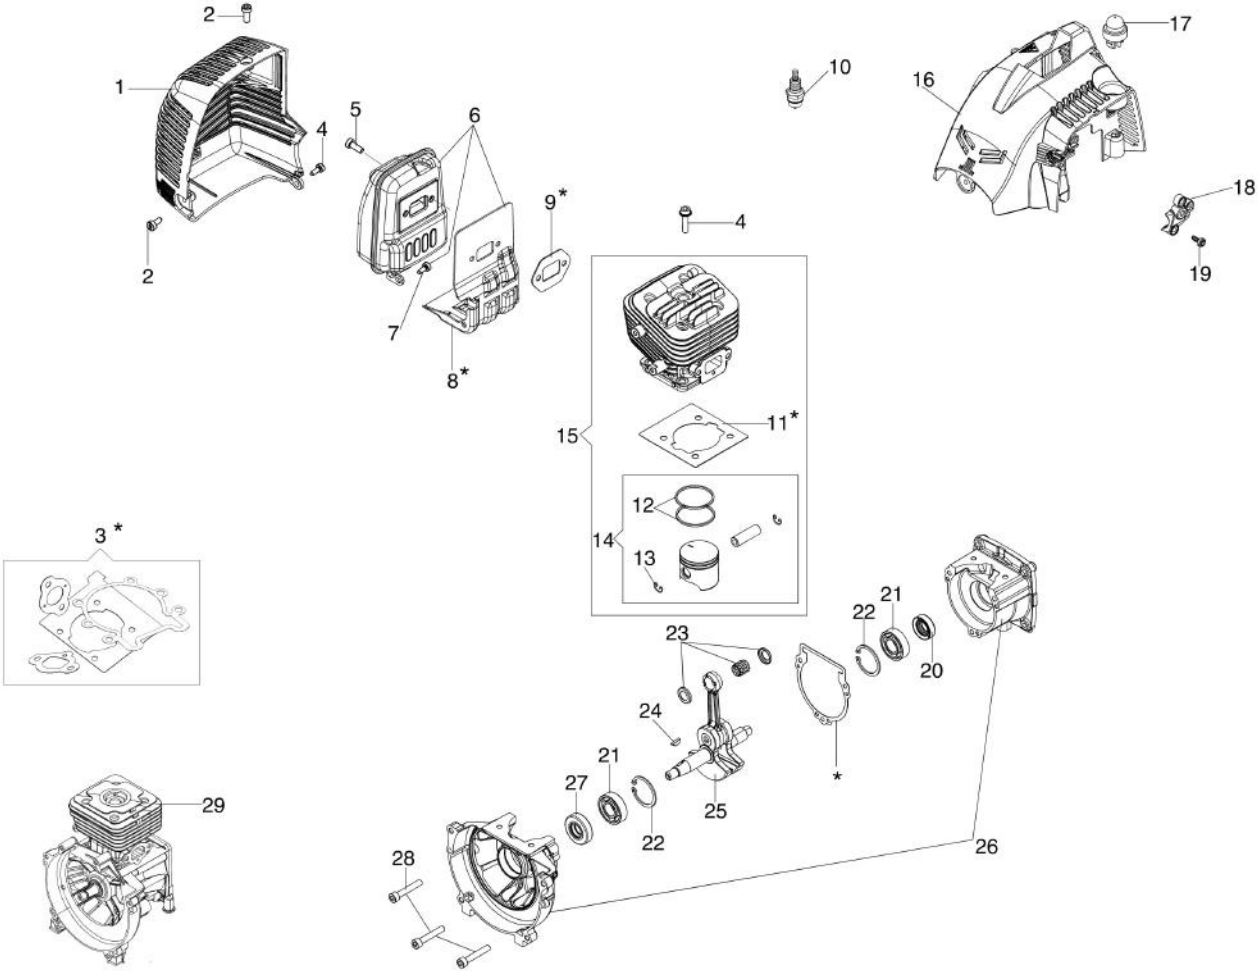


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61280293R	Muffler cover			Grigio; Grey	
2	2	3893054R	Screw				
3	1	61282025E	Gasket set				
4	5	3891048R	Screw				
5	2	3891044R	Screw				
6	1	61290075	Complete muffler				
7	1	3892001A	Screw				
8	1	61280008DR	Gasket				
9	1	61280206R	Gasket				
10	1	3055120	Spark plug				
11	1	61280005BR	Gasket				
12	2	61050046R	Piston ring				
13	2	093000167R	Ring				
14	1	61282026A	Piston assy Ø36				
15	1	61282027D	Complete cylinder				
16	1	61280185R	Cylinder cover			Arancio; Orange	
17	1	2318817R	Air purge				
18	1	61250253R	Stopper			Arancio; Orange	
19	3	3960087AR	Screw				
20	1	3050038R	Seal ring				
21	2	3034009R	Bearing				
22	1	3025019	Ring				
23	1	61290077	Set roller cage and washer				
24	1	3028013R	Key				
25	1	61280004R	Crankshaft				
26	1	61280292	Half crankcase set + screws				
27	1	3050039R	Seal ring				
28	3	3860096R	Screw				
29	1	61282031BR	Short block				

Illustration Starter Assy and clutch

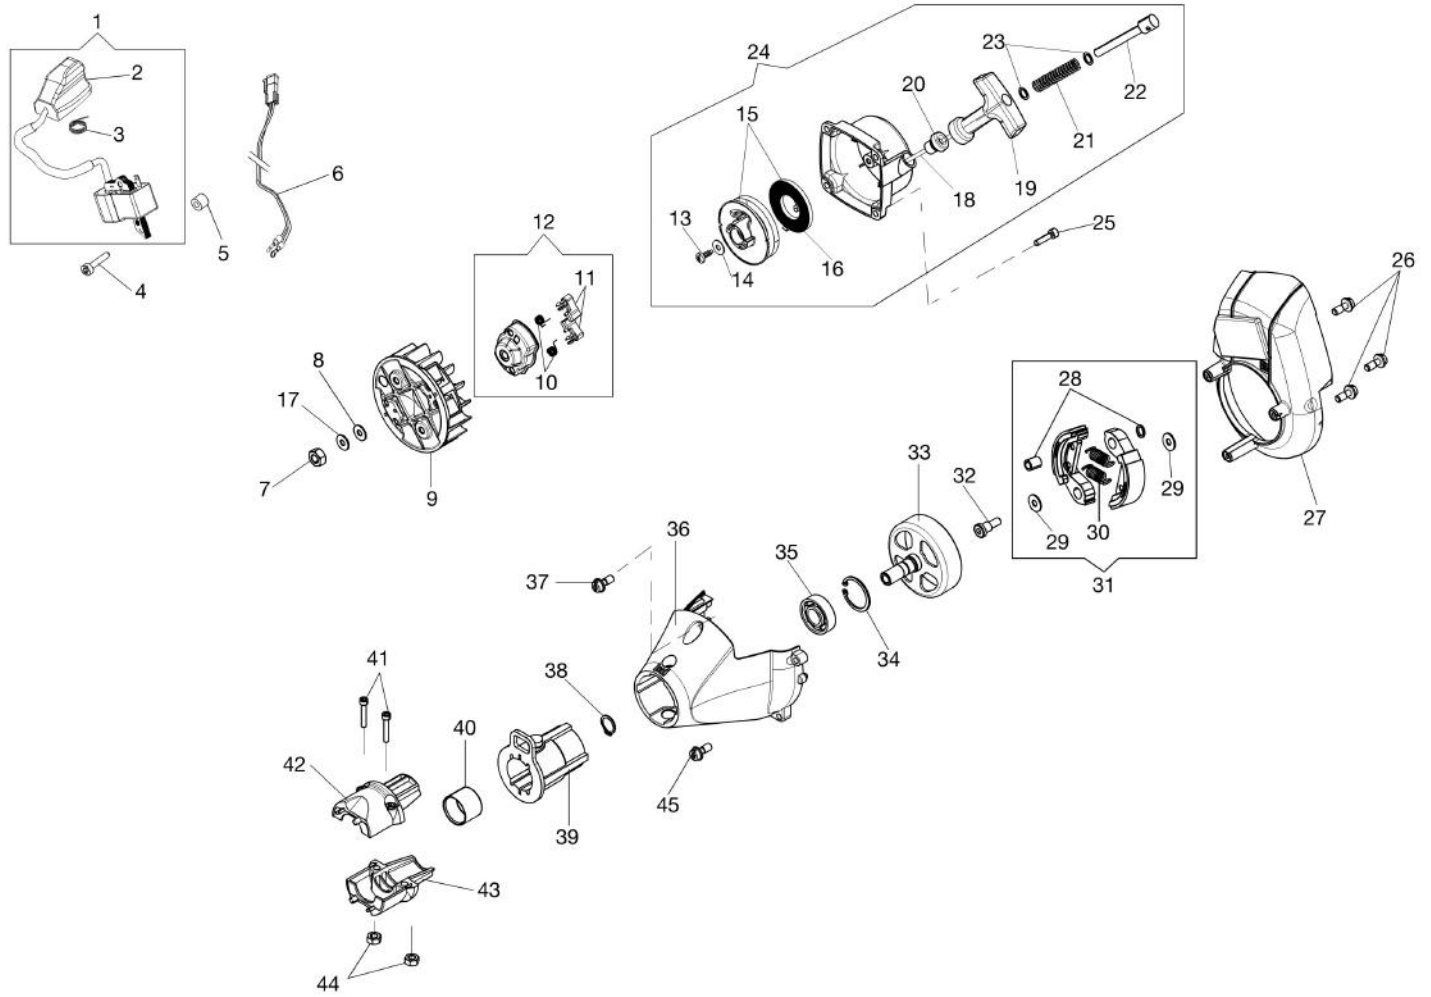


Illustration Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2501010BR	Ignition coil				
2	1	61280164R	Spark plug cap				
3	1	50050127	Spring				
4	2	3891020R	Screw				
5	2	50160218AR	Spacer				
6	1	61280291AR	Cable				
7	1	3912009	Nut				
8	1	3916009	Washer				
9	1	61280187R	Flywheel				
10	2	61070039R	Spring				
11	2	61070038R	Pawl				
12	1	56560034R	Clutch driver				
13	1	3960070AR	Screw				
14	1	094600054	Washer				
15	1	61172004R	Complete pulley				
16	1	61070036R	Spring				
17	1	3833080R	Washer				
18	1	61070019AR	Starter rope				
19	1	56530018R	Starter handle				
20	1	072700089R	Bushing				
21	1	56530019	Spring				
22	1	56530020	Insert				
23	2	56530021	Washer				
24	1	61170060BR	Starter assy			Arancio; Orange	
25	1	3891048R	Screw				
26	3	3960045	Screw				
27	1	61280163R	Flange				
28	1	61280151A	Set spacer				
29	4	3918007R	Washer				
30	2	4138494	Spring				
31	1	61280135CR	Clutch				
32	2	3806040	Screw				
33	1	61280130R	Clutch drum				
34	1	3025019	Ring				
35	1	3035023R	Bearing				
36	1	61280177R	Starter case				
37	1	3893054R	Screw				
38	1	3024012R	Snap ring				
39	1	4161428R	Sleeve				
40	1	4161364	Bushing				
41	2	3801016R	Screw				
42	1	61010020	Adaptor				
43	1	61010021	Adaptor				
44	2	3914003R	Nut				
45	4	3891048R	Screw				

Illustration Tank and air filter

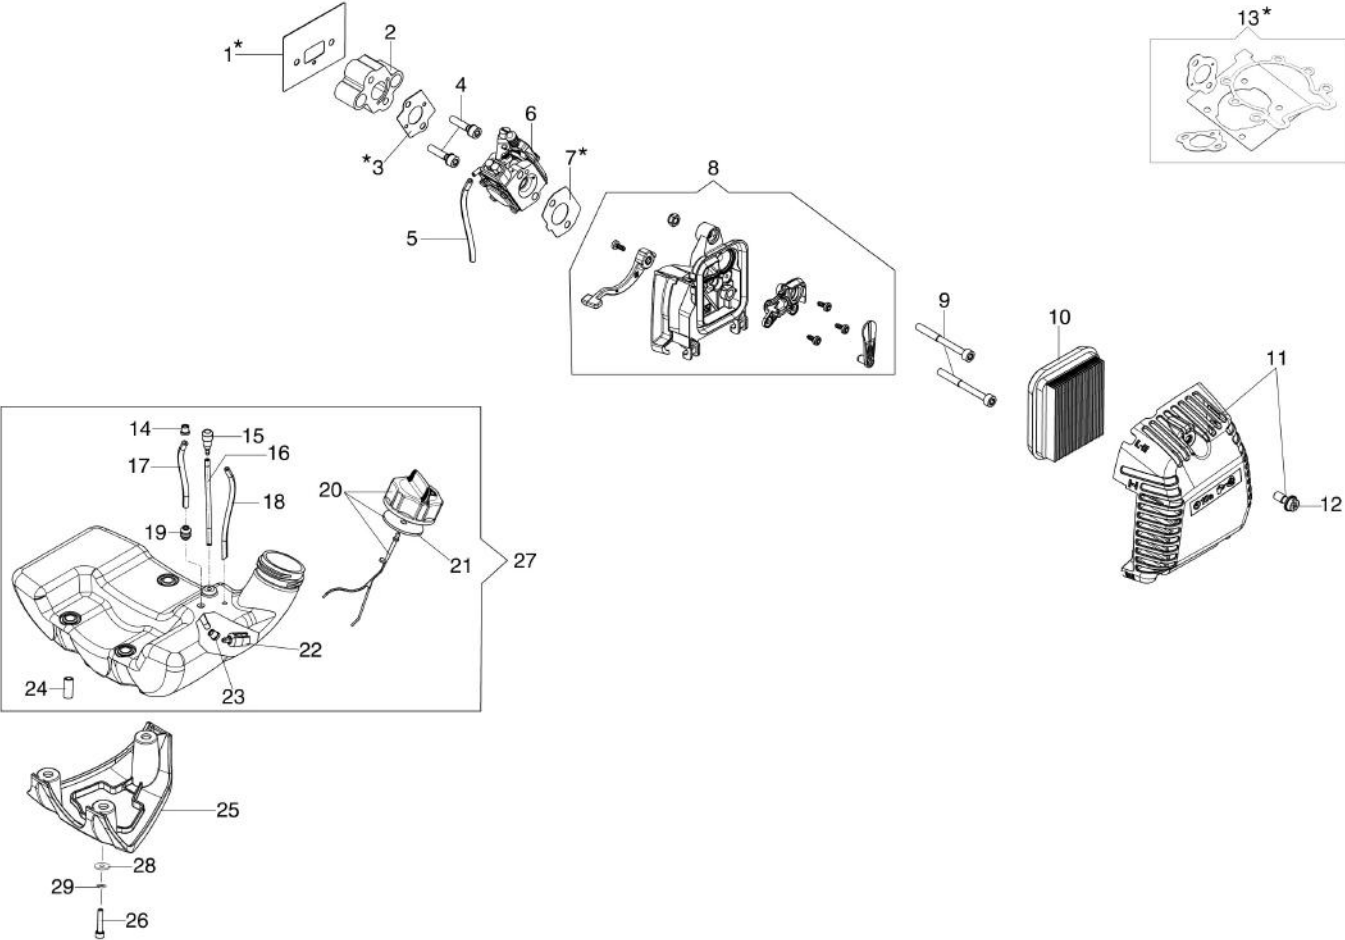


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	072700076CR	Gasket				
2	1	074000130C	Insulator				
3	1	072700077CR	Gasket				
4	2	3891048R	Screw				
5	1	61280054R	Tube				
6	1	2318654R	Carburetor WT-1150				
7	1	61280059CR	Gasket				
8	1	61280183R	Air filter support set				
9	2	3891063R	Screw				
10	1	61170016R	Air filter				
11	1	61290078	Air filter cover				
12	1	61330040AR	Screw				
13	1	61282025E	Gasket set				
14	1	61280105	Band				
15	1	61070011AR	Breather valve				
16	1	61070078R	Tube				
17	1	61280055R	Tube				
18	1	61280056	Tube				
19	1	4161211R	Bush				
20	1	61070079AR	Tank cap				
21	1	61070006R	Gasket				
22	1	094600450R	Fuel filter				
23	1	61110162B	Bushing				
24	3	61070015	Insert				
25	1	61170041	Stand				
26	3	3891048R	Screw				
27	1	61282030R	Tank				
28	3	3918005R	Washer				
29	3	3819006R	Washer				

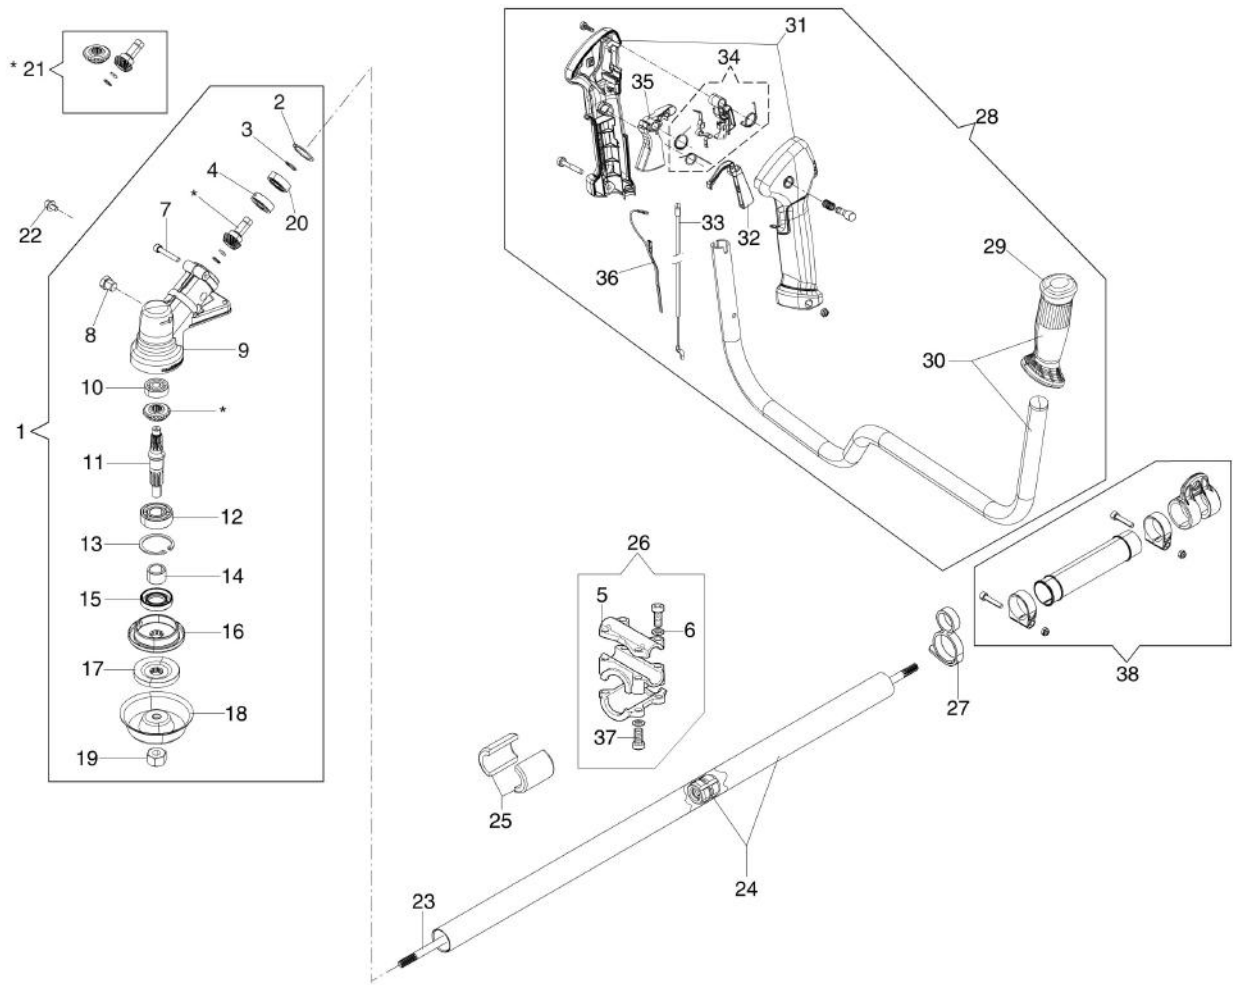


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61250237A	Set bevel gear Ø26 + insert				
2	1	3025018R	Ring				
3	1	3024010R	Snap ring				
4	1	3034008R	Bearing				
5	1	072700264CR	Clamp				
6	8	3819006R	Washer				
7	1	3901016	Screw				
8	1	61040071R	Cap				
9	1	61050013R	Gear case				
10	1	3034218R	Bearing				
11	1	61250054R	Pin				
12	1	3034012R	Bearing				
13	1	3025022R	Ring				
14	1	61040066R	Spacer				
15	1	3050018R	Seal ring				
16	1	61040145R	Hub				
17	1	4179089R	Flange				
18	1	61110074R	Guard				
19	1	61110075R	Nut				
20	1	3035230R	Bearing				
21	1	61040132A	Bevel gear set				
22	1	61052007	Screw				
23	1	61170075R	Drive shaft				
24	1	61280155	Tube Ø26				
25	2	072700082R	AV-mount				
26	1	074000183AR	Clamp				
27	1	61170132R	Grommet				
28	1	61290076	Complete handle				
29	1	61040140R	Knob				
30	1	61072037R	Handlebar				
31	1	61380097	Pair of handles				
32	1	61370114R	Lever				
33	1	61280204R	Throttle cable				
34	1	61370294	Lever group				
35	1	61380064R	Throttle lever				
36	1	61280228R	Cable				
37	8	3801013R	Screw				
38	1	4179198R	Band				

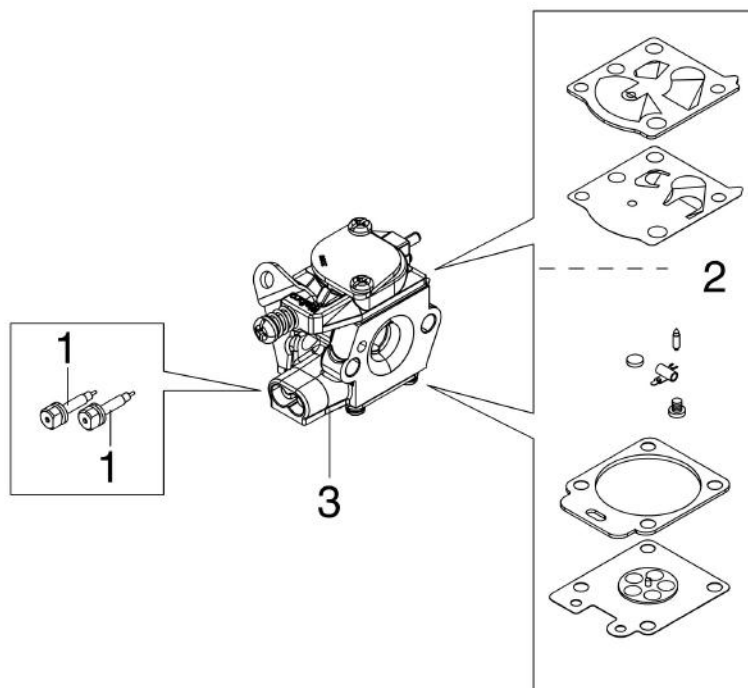


Illustration Carburetor WT-1150

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	2318778	Adjust. screw				
2	1	2318671	Repair kit				
3	1	2318654R	Carburetor WT-1150				

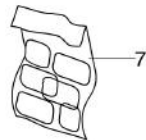
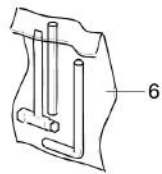
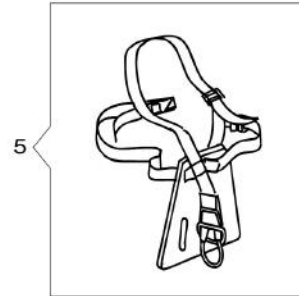
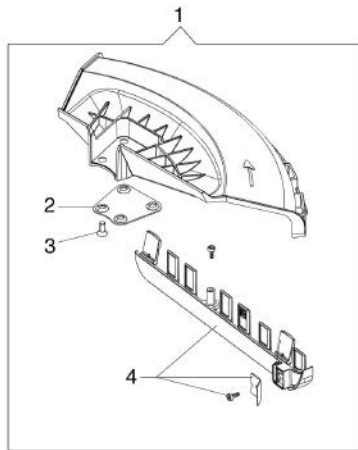


Illustration Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61042036BR	Guard			Arancio; Orange	
2	1	4174278	Plate				
3	4	3802004CR	Screw				
4	1	4179113AR	Skirt w/blade				
5	1	4179164R	Harness				
6	1	61260029	Tool kit				
7	1	61290079	Labels kit				
8	1	4095673B	3-tooth blade				

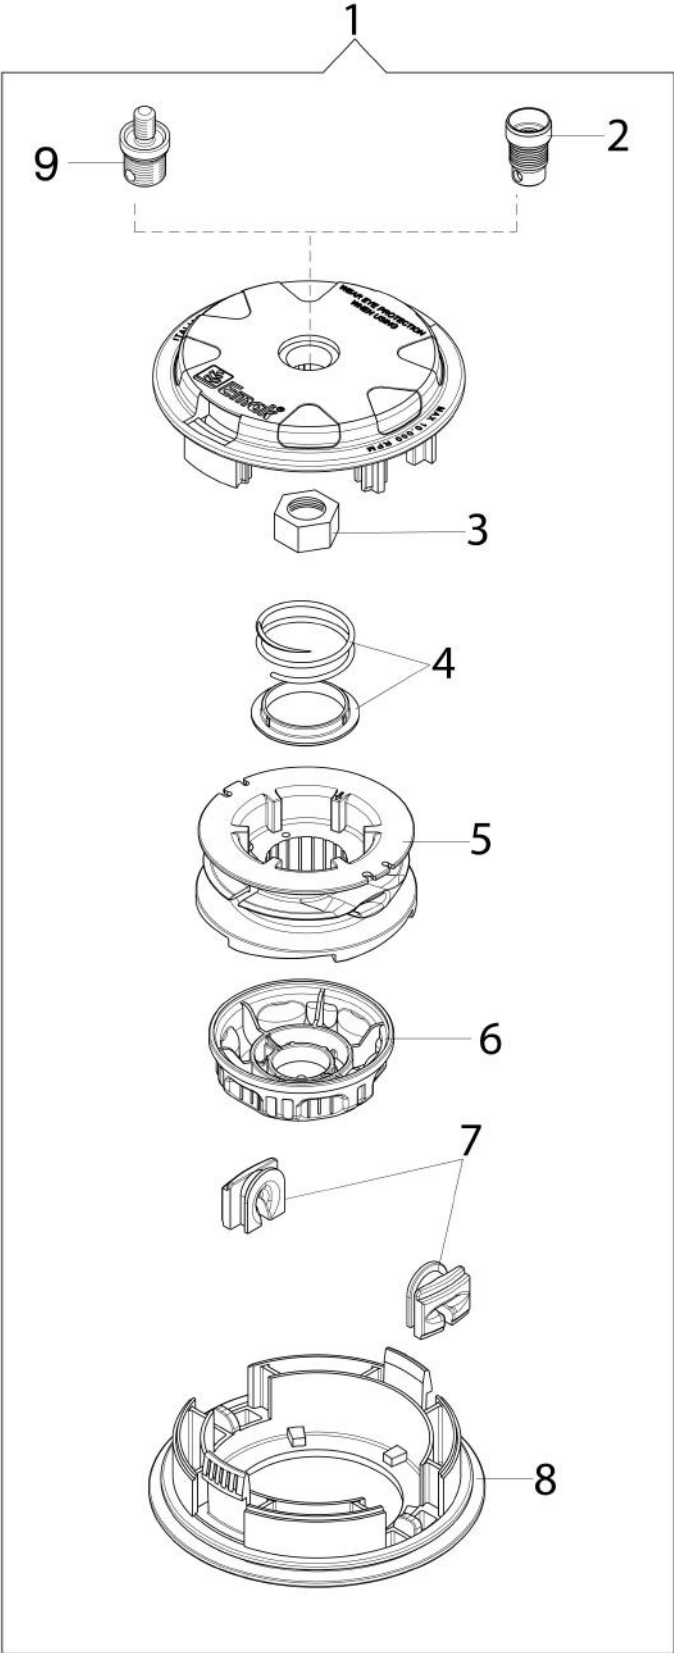


Illustration Illustrated parts list (Head "Load and Go" Ø130)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129008	Head Load&Go			Filo Ø 2,4 mm; Nylon line Ø 2,4 mm	
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020AR	Ignition coil				
6	1	63120007AR	Knob				
7	2	63120001R	Bushing				
8	1	63120005R	Cover				
9	1	63120042R	Insert				